 


AROMA²⁴/₇

AIRMAX NOVO

 
 
 
 
 
 
PRODUCT MANUAL

Aroma diffuser

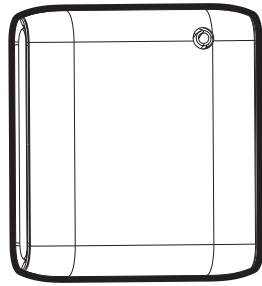

01 Specification

- [Model] AE108
- [Size] 174*156*63mm
- [Bottle] 100ml
- [Input] DC5V --- 0.3A MAX
- [Power] 1.5W
- [Coverage] 30m²/90m³/3200ft³
- [N.W.] 0.59kg
- [Material] Plastic

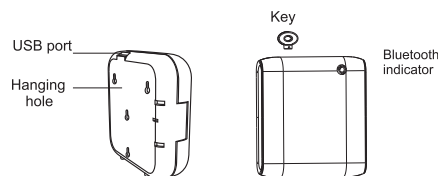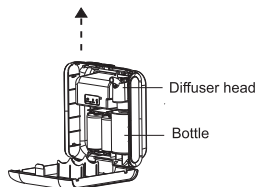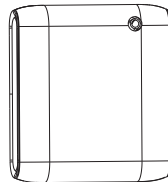

02 APP instruction

Search AROMA 24/7 in Google Play or App Store

NOTE

1. Please make sure the bluetooth function is turned on
2. Please make sure the location of the mobile phone is turned on



Device + Add device

AAA >

AAA >

Device Setting Save

Setting About

Name: AAA → Amend device name

Label: AAAAAA → Remarks: location

Delete working period X

07:00-21:00 Grade: 09 → Add working period

Mon Tue Wed Thur Fri Sat Sun → Time switch

Input password

Login

(PS: There are 5 working periods available to be set.)

Amend password

Device control

Set About

PCB Version: AAAAA

Equipment version: AAAAA

APP version: AAAAA

Change password

Change password

The new password

Confirm password

Change password

Working period setting Save

Start working time Stop working time

04

05

06 : 00 00 : 01 → Slide up and down to adjust

07 01 01 02

 
08 02 02 03

Repeat Mon Tue Wed Thur Fri Sat Sun → Select the day


Concentration grade 6 → Select grade

If you forget the password, please press the reset button to restore the factory settings. The factory settings password is 8888.

03 Installation method

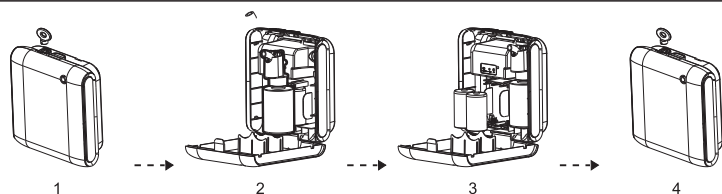


 
1. Insert the key and the mating part, twirl to " OPEN " and then pull them out. Press the fixed button on the top and push forward.
2. Tightly connect the atomizer head and the fragrance bottle, and install them to the machine.
3. Choose "Power mode" or "Battery mode", plug in or insert the battery.(Please wait about 12 minutes to let machine charged on the first time connect with power.)
4. Insert the key to the mating parts, then insert them to the keyhole, twirl to "CLOSE " for locking.

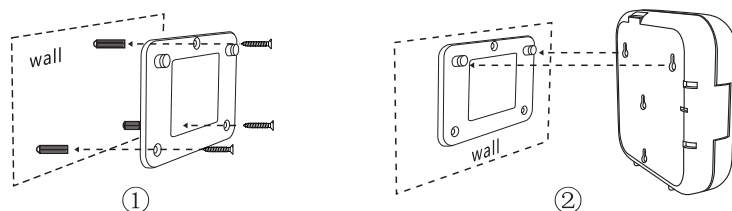

1. Mount the bracket on the wall with 3 screws
2. Hang the machine to the bracket

Note: 3M adhesive should only be applied to clean, flat tiles or wooden boards. It is important to secure the adhesive edge with sealant on the wall, since 3M adhesive has poor fixation performance, which may result in the machine falling down if mounted only with 3M adhesive.

  04 Reminding

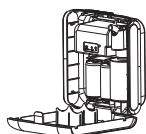

Bluetooth indicator:
 --Catch the signal - Flash
 --Connected - Light on
 --Disconnected - Light off

05 Concentration and consumption


| Grade | G1 | G2 | G3 | G4 | G5 |
|-------------------|-----|------|-----|------|-----|
| Intervals (min) | 15 | 13.5 | 12 | 10.5 | 9 |
| Grade | G6 | G7 | G8 | G9 | G10 |
| Intervals (min) | 7.5 | 6 | 4.5 | 3 | 1.5 |

Notes:


1. 100ml oils can diffuse 6300-6700 times under normal circumstances.
2. All of the above grade atomization work time is 3 seconds.
3. Different grade and oil may with different consumption.

06 ⚠ Warning

 1. Please keep the machine vertical. Tilt or lie flatly may cause oil overflow. The machine efficiency may be affected.



 2. Shall not modify , disassemble or repair the machine . If any failure happens to the machine, please contact our technical personnel.



3. Do NOT use quick charger for device.

4. When the machine is first used or hasn't been used for more than 7 days, the controlling board is out of power. Please insert the batteries/plug in and wait for 1-2 minutes, the machine will be back on automatically.

07 Equipment cleaning

The machine needs to be cleaned when below situations happen:

1. You're about to change to another kind of essential oil.
2. The atomization volume becomes weak .

Cleaning steps:

1. Pull out the atomized head, loose the bottle.
2. Refill industrial alcohol into bottle about 15%, make it diffuse 5-10 times.
3. Airing the atomized head and the bottle.

08 Troubleshooting

Before asking to have the machine repaired, please try to diagnose the problem first following to bellow instructions.

| Breakdown | Solution |
|------------------|---|
| Does not diffuse | -Check whether the mode you choose is correct or not. -Check if the machine is during "Non-Working period" -Air pump may be damaged, change a new one. -Check whether the tube is loose or not |
| Low diffusion | -The atomizing core is blocked, clean by alcohol or change a new component. -Check whether the gasket is damage/loose or not. -Check whether the tube is loose or not |
| Oil spill | -Check whether the bottle is loose or not -The gasket in the atomized head is damaged or loose. |
| Oil sprinkle | -The atomized head is damaged, change a new one -The machine is tilted or lie down, keep the machine vertical. |
| Abnormal noise | -The air pump is loose, retighten the pump -The air pump is damaged, change a new one. |